

# Water Supply Valves

## Installation Instructions


**CAUTION:** OVERTIGHTENING OF FITTINGS CAN CAUSE PRODUCT TO CRACK AND FAIL OVER TIME.

**CAUTION:** USE OF PLUMBER'S PUTTY OR AMMONIA BASED PRODUCTS MAY CAUSE CORROSION AND FAILURE OF VALVE.

**CAUTION:** NOT FOR USE WITH PEX PIPE OR FITTINGS.


### COPPER COMPRESSION INLET AND OUTLET

1. Slide compression nut and sleeve over copper tube.
2. Hand tighten compression nut onto valve body until tight. DO NOT USE ANY PUTTY ON THREADS.
3. For inlet, tighten 1/2 turn from hand tight position, using hand tools only, and check for leaks. Use additional 1/4 turn to tighten if fitting leaks.
4. For outlet, tighten 3/4 turn from hand tight position, using hand tools only, and check for leaks. Use additional 1/4 turn to tighten if fitting leaks.

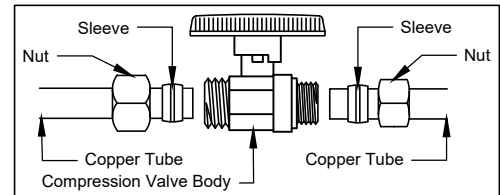


### SWEAT INLET

1. Trim copper supply tube and valve sweat tube to size.
2. Clean outside of supply tube and inside of valve tube.
3. Solder valve onto copper supply tube.
4. Do not move valve until solder hardens.
5. Check for leaks.

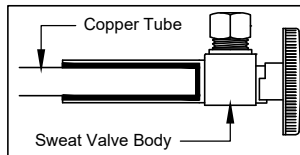

### 1/2 IPS INLET

1. Apply thread tape to pipe nipple. DO NOT USE ANY PUTTY ON THREADS.
2. Hand tighten valve onto pipe nipple.
3. Tighten with wrench and ensure proper outlet alignment.

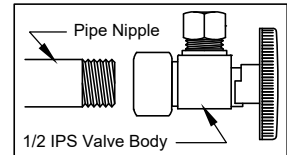

### WARRANTY

ONE YEAR WARRANTY ON PLATED FINISHES, 90 DAY WARRANTY ON ORB, EB, MHB, WCP, and TB, & LIFETIME ON PVD FINISHES PROVIDED PROPER CARE HAS BEEN USED. LIFETIME WARRANTY FOR PVD IS FOR FINISH ONLY. ONE YEAR WARRANTY ON ALL PARTS. THE USE OF PLUMBERS PUTTY ON MOUNTAIN PLUMBING PRODUCTS VOIDS THE WARRANTY FOR ALL PRODUCTS, PARTS, AND FINISHES. OVERTIGHTENING OF FITTINGS ON MOUNTAIN PLUMBING PRODUCTS VOIDS WARRANTY FOR ALL PRODUCTS. WARRANTY APPLIES TO ORIGINAL PURCHASER AND CLAIMS REQUIRE PROOF OF PURCHASE.

### FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB<sup>®</sup>, SCRUBBING BUBBLES<sup>®</sup> OR COMET<sup>®</sup> TO CLEAN. DO NOT USE BRILLO<sup>®</sup> AND SCOTCH BRITE<sup>®</sup> PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE USING A SOFT CLOTH. STANDARD WINDEX CAN ALSO BE USED SPARINGLY. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH. AN OCCASIONAL COAT OF PURE CARNUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

Mountain Plumbing Products  
1-888-222-9140

[www.mountainplumbing.com](http://www.mountainplumbing.com)

Form Valve Installation Sheet MP 3-4-19



# Water Supply Valves

## Installation Instructions


**CAUTION:** OVERTIGHTENING OF FITTINGS CAN CAUSE PRODUCT TO CRACK AND FAIL OVER TIME.

**CAUTION:** USE OF PLUMBER'S PUTTY OR AMMONIA BASED PRODUCTS MAY CAUSE CORROSION AND FAILURE OF VALVE.

**CAUTION:** NOT FOR USE WITH PEX PIPE OR FITTINGS.


### COPPER COMPRESSION INLET AND OUTLET

1. Slide compression nut and sleeve over copper tube.
2. Hand tighten compression nut onto valve body until tight. DO NOT USE ANY PUTTY ON THREADS.
3. For inlet, tighten 1/2 turn from hand tight position, using hand tools only, and check for leaks. Use additional 1/4 turn to tighten if fitting leaks.
4. For outlet, tighten 3/4 turn from hand tight position, using hand tools only, and check for leaks. Use additional 1/4 turn to tighten if fitting leaks.

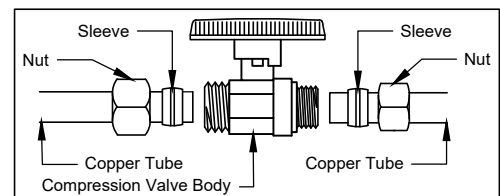


### SWEAT INLET

1. Trim copper supply tube and valve sweat tube to size.
2. Clean outside of supply tube and inside of valve tube.
3. Solder valve onto copper supply tube.
4. Do not move valve until solder hardens.
5. Check for leaks.

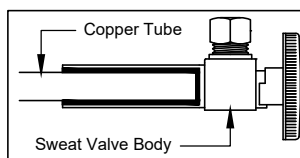

### 1/2 IPS INLET

1. Apply thread tape to pipe nipple. DO NOT USE ANY PUTTY ON THREADS.
2. Hand tighten valve onto pipe nipple.
3. Tighten with wrench and ensure proper outlet alignment.

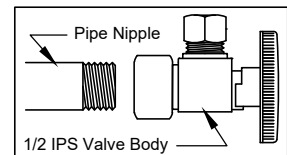

### WARRANTY

ONE YEAR WARRANTY ON PLATED FINISHES, 90 DAY WARRANTY ON ORB, EB, MHB, WCP, and TB, & LIFETIME ON PVD FINISHES PROVIDED PROPER CARE HAS BEEN USED. LIFETIME WARRANTY FOR PVD IS FOR FINISH ONLY. ONE YEAR WARRANTY ON ALL PARTS. THE USE OF PLUMBERS PUTTY ON MOUNTAIN PLUMBING PRODUCTS VOIDS THE WARRANTY FOR ALL PRODUCTS, PARTS, AND FINISHES. OVERTIGHTENING OF FITTINGS ON MOUNTAIN PLUMBING PRODUCTS VOIDS WARRANTY FOR ALL PRODUCTS. WARRANTY APPLIES TO ORIGINAL PURCHASER AND CLAIMS REQUIRE PROOF OF PURCHASE.

### FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB<sup>®</sup>, SCRUBBING BUBBLES<sup>®</sup> OR COMET<sup>®</sup> TO CLEAN. DO NOT USE BRILLO<sup>®</sup> AND SCOTCH BRITE<sup>®</sup> PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE USING A SOFT CLOTH. STANDARD WINDEX CAN ALSO BE USED SPARINGLY. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH. AN OCCASIONAL COAT OF PURE CARNUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

Mountain Plumbing Products  
1-888-222-9140

[www.mountainplumbing.com](http://www.mountainplumbing.com)

Form Valve Installation Sheet MP 3-4-19

