

BDWOF-DS-NSTRIM

DRAIN & TAILPIECE FOR USE WITH BDWOF-DSROUGH









SPECIFICATION SHEET

- FOR USE WITH BDWOF-DSROUGH ONLY
- FOR FREE-STANDING TUBS WITHOUT OVERFLOW
- INCLUDES EZ-CLICK™ TUB DRAIN, TAILPIECE, AND INSTALLATION TOOLS
- FITS MINIMUM TUB THICKNESS 1-1/4", MAXIMUM THICKNESS 2"
 - **NOTE: FOR THINNER TUBS, USE ALTERNATIVE GASKET BDWOF-DS/SPACER (INCLUDED)**
- FITS 2" DIAMETER DRAIN HOLE
- SIMPLIFIES INSTALLATION OF FREE-STANDING TUBS
- EZ-CLICK™ TUB DRAIN IS SNAKEABLE & FEATURES REMOVABLE HAIR CATCHER
- ALLOWS FOR DRAIN TO BE REMOVED WITHOUT REMOVING THE TUB

INSTALLATION TOOLS

BDWOF-DS/SPACER:
OPTIONAL SPACER GASKET FOR
TUBS LESS THAN 1 - 1/4" THICK

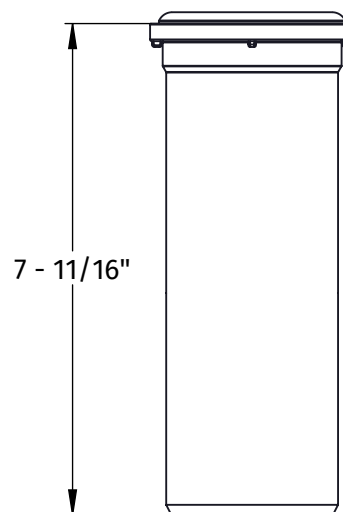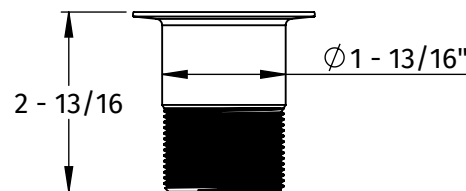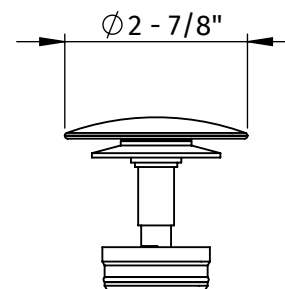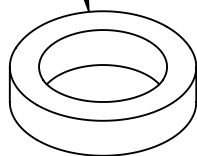

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/WARRANTY-CLAIMS

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE